

## Part # 01-200 Deluxe Grab Bar



### ITEMS INCLUDED

- Dacromet Hardware Pack:
  - 4 - 8mm x 40mm Hex Head Bolts
  - 4 - 8mm Flat Washers

### TOOLS NEEDED

- 13mm Socket
- 13mm Wrench



Grab Bar



Trailer Hitch (compatible with Grab Bar)  
*\*Sold Separately*

**NOTE:** This grab bar is designed to fit on both Steel & Plastic GTW® footrests. Other manufacturer's footrests may require drilling.

## STEP 1



Switch key to the OFF position and engage the parking brake.



## STEP 2

Locate the four pre-drilled holes in your GTW® rear seat footrest (2 on the front and 2 on the back).

The grab bar will mount the same way on both footrests.

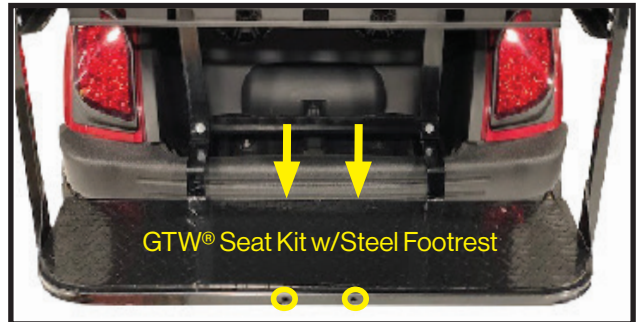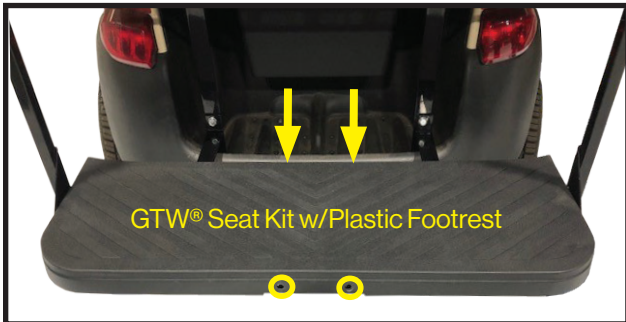


## STEP 3



13MM SOCKET & WRENCH

Using the supplied hex head bolts and flat washers, attach the grab bar to the footrest.

Once all four bolts are in place, tighten hardware to 15 ft-lbs of torque.

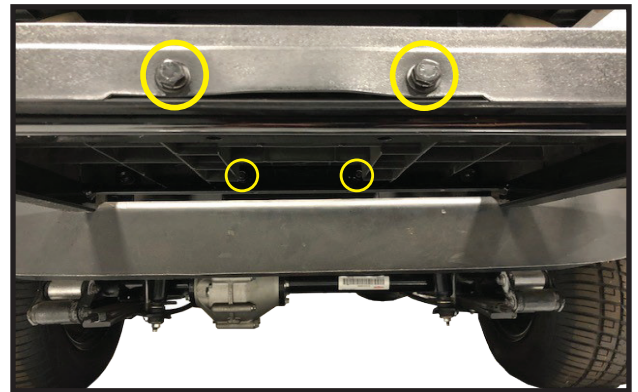

## STEP 4



13MM SOCKET & WRENCH

To install the GTW® trailer hitch on the grab bar, use the hardware provided with the trailer hitch and attach it to the grab bar as shown.



*\*Grab bar shown off of cart for instructional purposes only*

# INSTALLATION COMPLETE