



**DRIVE / G29
CARGO BOX
INSTALLATION INSTRUCTIONS**
04-007

INCLUDED:

- 2 MAIN BRACKETS
- BAGWELL BRACKET
- 2 CARGO BOX BRACKETS
- FRONT BRACKET BRACE



Main Brackets



Bagwell Bracket



Cargo Box Brackets



Front Bracket Brace

1
Remove hardware from struts and take off canopy. Retain hardware. You will need it later.



2
Remove hardware from gutters. Retain hardware from gutters. You will need it later. Remove gutters by sliding them upward.



Remove rear strut from both sides. Retain all hardware. You will need it later.

3

Remove seat back. Retain hardware. You will need it later.




4



Remove motor cover panel by popping out plastic rivets. Retain hardware. You will need it later.

5

Take off basket by removing hardware located inside motor compartment. Retain hardware. You will need it later.

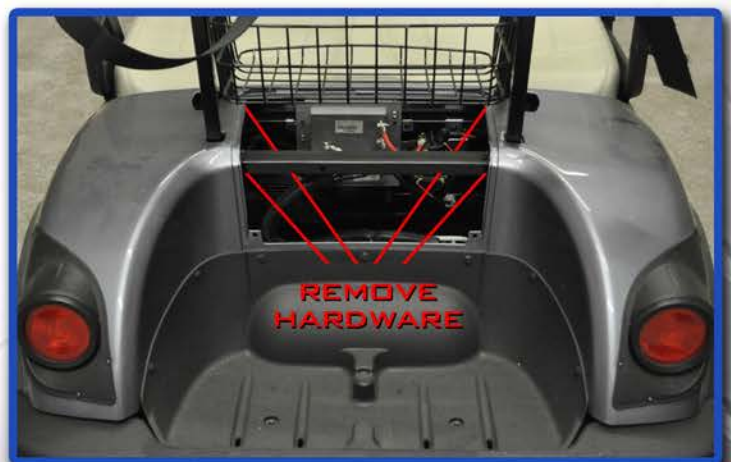

6



Place front main brackets into golf cart where factory basket was removed. Install hardware removed in step 6.

Attach rear struts to brackets using hardware retained from step 3.



ATTACH
HARDWARE

Attach front bracket brace to main brackets using 8mm hardware provided.



Attach seat back to main brackets using hardware retained from step 4.





Remove factory bolts from bagwell and then make the hole larger by drilling it out with a 7/16 drill bit through the top and bottom of the frame.

12

Attach bagwell bracket using 10mm x 90mm bolts and tighten.



13

Attach cargo box bracket to main bracket using 10mm x 25mm hardware provided, hand tighten.

14

Attach cargo box bracket to bagwell bracket using 10mm x 25mm hardware, hand tighten.





Reattach canopy using retained hardware from step 1.

15

Attach cargo box using 10mm x 40mm hardware. Once all bolts are in place, tighten all hardware.

16



DRIVE / G29 CARGO BOX HARDWARE PACKS

- (2) 10MM X 90MM SHOULDER HEX BOLTS (BAGWELL BRACKET TO CART)
- (4) 10MM X 25MM SHOULDER HEX BOLTS (MOUNT BRACKETS TO MAIN BRACKETS & BAGWELL BRACKET)
- (4) 10MM X 40MM SHOULDER HEX BOLTS (CARGO BOX TO MOUNTING BRACKETS)
- (20) 10MM X 20MM X 2MM WASHERS
- (10) 10MM ANTI-SLIP NUTS
- (2) 8MM WASHERS
- (2) 8MM ANTI-SLIP NUTS

GO TO WWW.MYMADJAX.COM FOR INSTALLATION VIDEOS

