

26-157

EXTENDED TOP BRACKETS

FOR GENESIS 150 SEAT KIT

will fit E-Z-GO® TXT®

INSTALLATION INSTRUCTIONS

INCLUDED:

Front Brackets
Rear Brackets
Genesis 150 struts

TOOLS NEEDED:

17mm Socket
17mm Wrench
13mm Socket
10mm Socket
10mm Wrench



Rear Brackets



Genesis 150 Struts

Front Brackets



We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.


1

Remove factory canopy and rear struts. Retain hardware that is used to attach rear struts to G150 main bracket.






2

Attach front brackets to front struts using 8mm x 40mm hardware in factory mounting locations as shown. Tighten hardware.

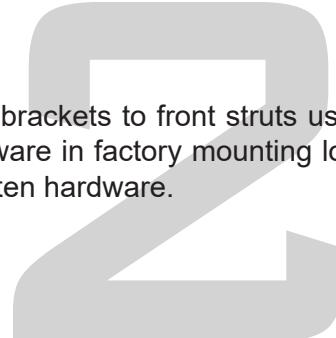




Attach rear brackets to G150 struts using 6mm x 40mm bolts, nuts, lock washers as shown. Be sure to mount bracket using the smaller diameter holes. Strut will mount from the inside of the track.

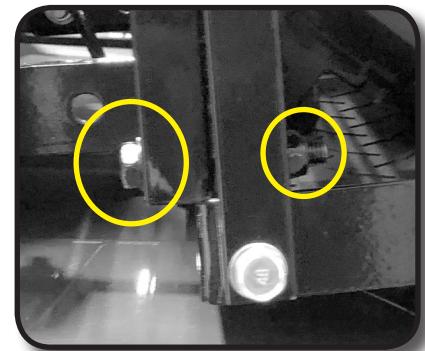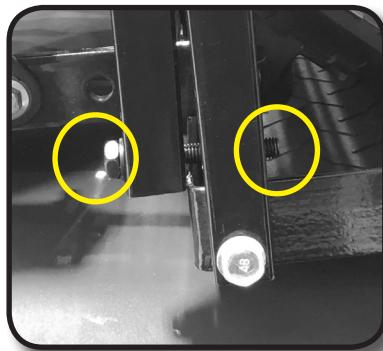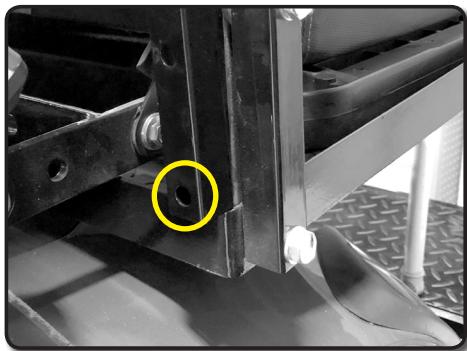


Using 10mm x 70mm bolts attach struts to seat back support bar as shown.



Now insert two 8mm x 25mm carriage bolts, washers, lock washers, nuts into each side extrusion at each corner of top. These bolts will secure top extrusion to strut brackets.

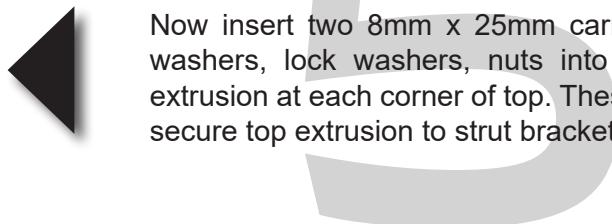

Connect the strut brackets to the top extrusion using 8mm carriage bolts, washers, lock washers, nuts. Hand tighten hardware first.

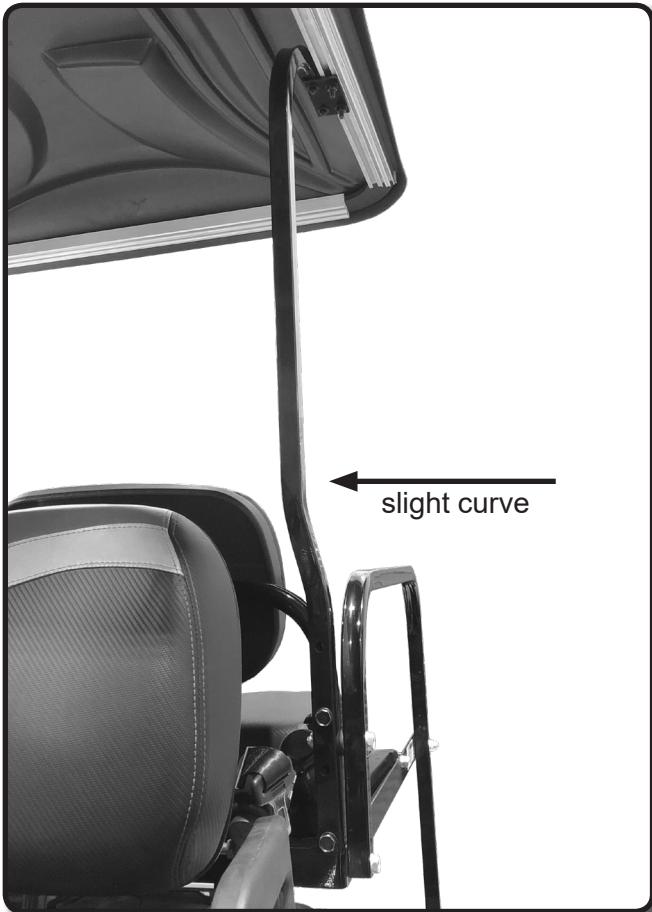

When installed correctly, the strut will have a slight curve inward as shown. Once all bolts are in place then tighten.

NOTE: If installing a windshield make sure to install windshield before tightening top hardware.

Installation Complete

Dacromet Hardware Pack

8 - Carriage Bolt	M8 x 25
4 - Hex head Bolt	M6 x 40
4 - Hex head Bolt	M8 x 40
4 - Hex head Bolt	M10 x 70
8 - Flat Washer	$\varnothing 6 \times \varnothing 18 \times 1.5$
16 - Flat Washer	$\varnothing 8 \times \varnothing 18 \times 2$
8 - Flat Washer	$\varnothing 10 \times \varnothing 20 \times 2$
8 - Spring Washer	$\varnothing 8$
8 - Nut	M8
4 - Anti-Slip Nut	M6
4 - Anti-Slip Nut	M8
4 - Anti-Slip Nut	M10

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this product is compatible. These products are aftermarket parts and are not original equipment parts. We are not connected or affiliated with or sponsored by Textron® or E-Z-GO®.