


INSTALLATION ADDENDUM

STEP A


Remove the exhaust outlet baffel. Then using a square, mark a line on the bracket following the frame.

NOTE: Be sure to wear safety glasses.

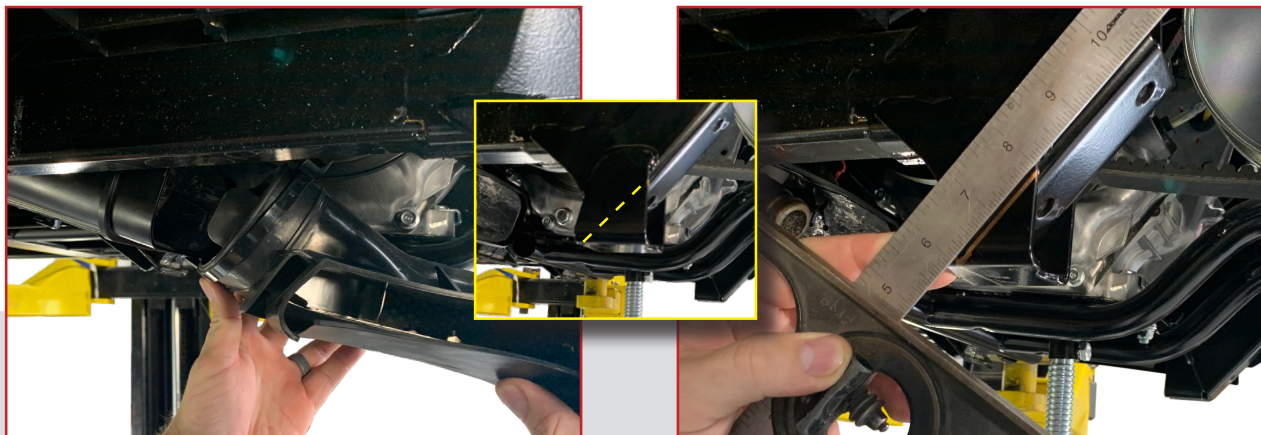

STEP B

Once bracket is marked on the inside and outside use a cutoff wheel to remove. Debur edges.

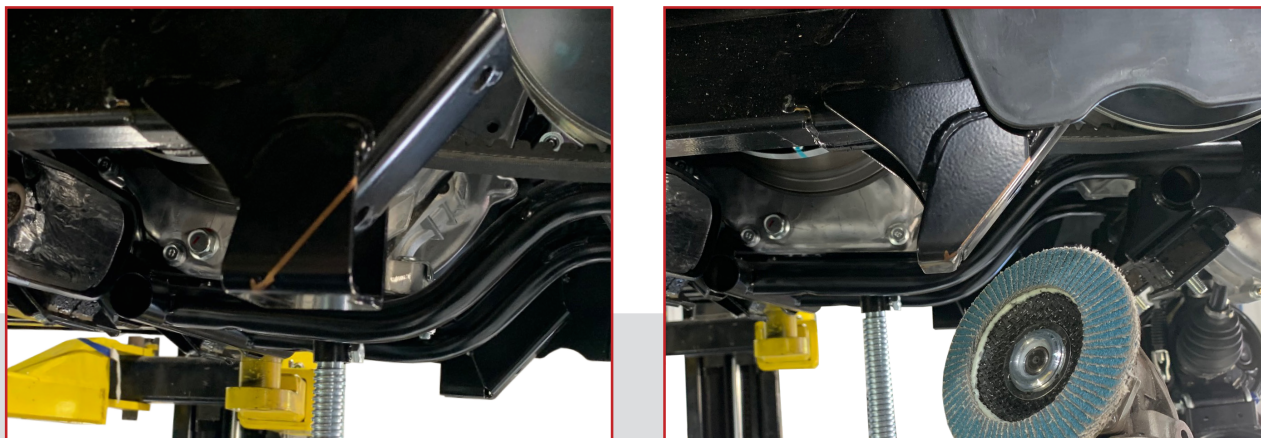

STEP C

Using corrosion resistant paint, cover the bare surface of where the metal was cut.



You can now return to Step 8 in the Main Instructions

ADDENDUM COMPLETE